

SA-WM SERIES

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. DISCONNECT POWER TO ALL CIRCUITS BEFORE WIRING FIXTURE. INSTALL IN ACCORDANCE WITH ALL NATIONAL, STATE, AND LOCAL CODES. DO NOT CONNECT TO AN UNGROUNDED SUPPLY. READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE. SUPPLEMENTAL INSTRUCTIONS MAY BE LOCATED ON THE FIXTURE, IN ADDITION TO THIS INSTRUCTION SHEET, REGARDING ORIENTATION, OR MOUNTING RESTRICTIONS.

SAVE THESE INSTRUCTIONS



WALL MOUNT ADAPTER

1. Install Hanger Bracket to Fixture Arm as shown in Fig. 1. using the provided (2 each) bolts, lock and flat washers. Torque to 20ft-lbs. (Thread adhesive is required).
2. Place the Wall Plate in desired location so that the flat surface is in contact with the wall and the angled surface is pointing up and away from the wall. Mark locations for supporting anchors (See Figure 2).
3. Secure Wall Plate with the supporting anchors using 3/8" bolts or studs (by others).

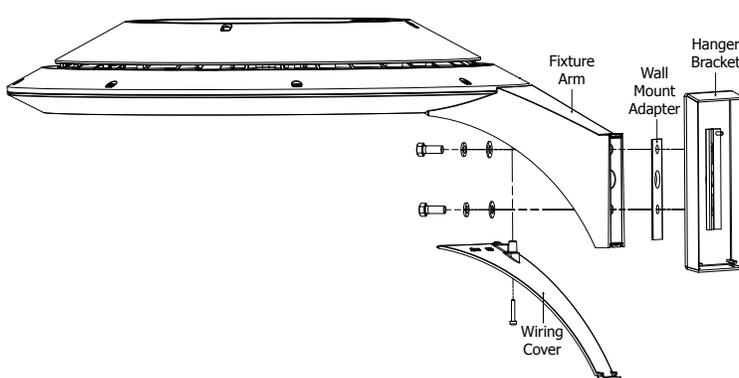


FIGURE 1

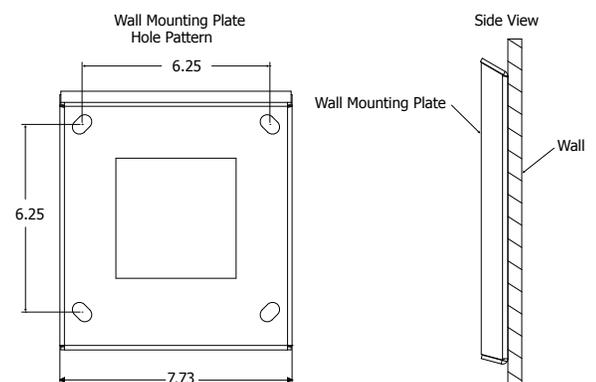


FIGURE 2



4. Adjust so that plate is level/plumb and secure to wall.
5. Pull supply and ground wires from conduit or j-box so that they extends at least 8 inches from Wall Plate.
6. Lift assembly over Wall Plate and hook Hanger Bracket over Wall Plate's top edge as shown in Fig 3. Feed supply wire through Hanger Bracket into Fixture Arm and lower fixture by rotation on wall plate.
7. Secure Hanger Bracket/fixture assembly using two screws and lock washers (provided). See Figure 4.
8. Make electrical connections and secure them inside the Fixture Arm. See Figure 5.
9. Insert Wiring Cover into Fixture Arm and secure with provided screw. See Figure 6.
10. Caulk top and sides of Hanger Bracket at the wall with weatherproof sealant. Do not use sealant on bottom edge.

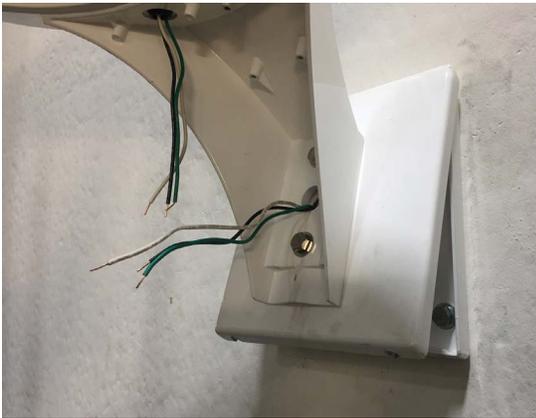


FIGURE 3



FIGURE 4



FIGURE 5

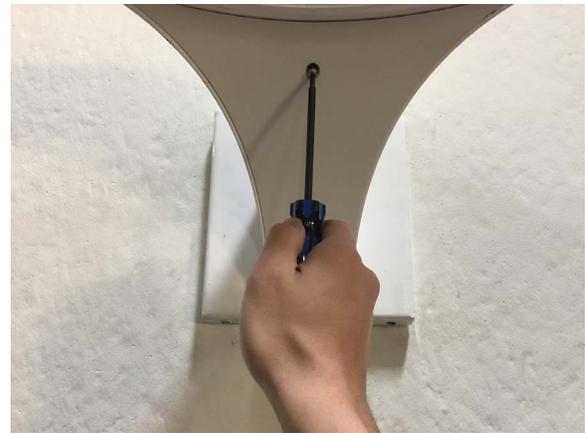


FIGURE 6

CUSTOMER SERVICE

For technical assistance, call 1-800-4KENALL (1-800-453-6255).

WARRANTY

For warranty information visit www.kenall.com/Resources/Certified-Performance-Warranties



www.kenall.com P: 800-4-Kenall F: 262-891-9701 10200 55th Street Kenosha, Wisconsin 53144

A brand of **legrand**

This product may be covered by patents found at www.kenall.com/patents. Content of specification sheets is subject to change; please consult www.kenall.com for current product details.
© 2018 Kenall Mfg. Co. All rights reserved.

SA-WM_F-7794_021820