

**BHH SERIES**

**IMPORTANT SAFEGUARDS**

**When using electrical equipment, basic safety precautions should always be followed, including the following:**

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. DISCONNECT POWER TO ALL CIRCUITS BEFORE WIRING FIXTURE. INSTALL IN ACCORDANCE WITH ALL NATIONAL, STATE, AND LOCAL CODES. DO NOT CONNECT TO AN UNGROUNDED SUPPLY. READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE. SUPPLEMENTAL INSTRUCTIONS MAY BE LOCATED ON THE FIXTURE, IN ADDITION TO THIS INSTRUCTION SHEET, REGARDING ORIENTATION, OR MOUNTING RESTRICTIONS.

**SAVE THESE INSTRUCTIONS**

Read all fixture markings and labels to insure correct installation of the fixture. Supplemental instructions may be located in the fixture, in addition to this instruction sheet, regarding orientation, mounting restrictions or optional equipment.

Disconnect power to all circuits before wiring fixture.

1. Open fixture by removing screws at top of fixture.
2. Lift housing to unhook from angled flange of baseplate.
3. Place baseplate against wall with cage nuts facing up. Locate and drill pilot holes using baseplate as template. Use fasteners appropriate for the mounting surface and fixture weight (supplied by others). Fixture should be mounted to surface with 6-point mounting (4-point for 2').
4. Re-assemble fixture in reverse order. Make sure housing engages with angled flange on baseplate before fastening.

NOTE: Verify proper engagement of housing to baseplate angled flange.

**CUSTOMER SERVICE**

For technical assistance, call 1-800-4KENALL (1-800-453-6255).

**WARRANTY**

For warranty information visit [www.kenall.com/Resources/Certified-Performance-Warranties](http://www.kenall.com/Resources/Certified-Performance-Warranties)

