

TD17 SERIES

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:


THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. DISCONNECT POWER TO ALL CIRCUITS BEFORE WIRING FIXTURE. INSTALL IN ACCORDANCE WITH ALL NATIONAL, STATE, AND LOCAL CODES. DO NOT CONNECT TO AN UNGROUNDED SUPPLY. READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE.

SUPPLEMENTAL INSTRUCTIONS MAY BE LOCATED ON THE FIXTURE, IN ADDITION TO THIS INSTRUCTION SHEET, REGARDING ORIENTATION, OR MOUNTING RESTRICTIONS.

SAVE THESE INSTRUCTIONS




1. Remove three (3) screws on housing to open.

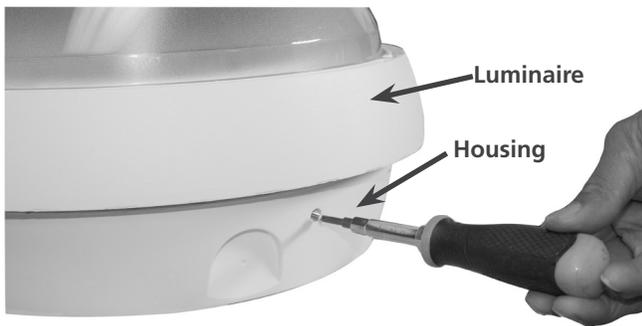

2. Remove hinge pin to separate housing from the luminaire.



3. Set luminaire on donut to protect sensor while installing housing.

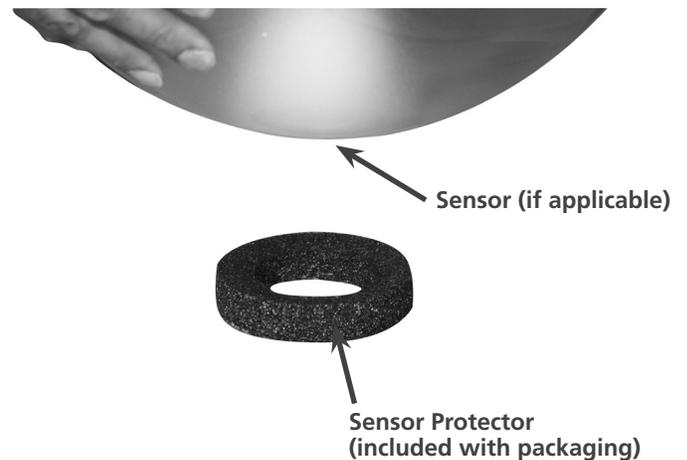

4. Install housing (four fasteners).




DTS Mount



Pendant Mount

5. Re-attach luminaire to housing with hinge pin.

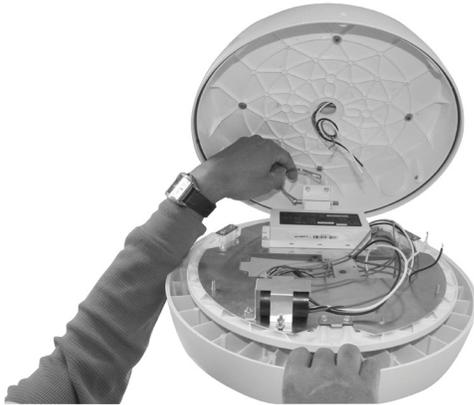

6. Make wire connections.



7. Close fixture and push up firmly while re-fastening three (3) housing screws. Make sure all three (3) screws are in place before letting go.




www.kenall.com | P: 800-4-Kenall | F: 262-891-9701 | 10200 55th Street Kenosha, Wisconsin 53144, USA


This product complies with the Buy American Act: manufactured in the United States with more than 50% of the component cost of US origin. It may be covered by patents found at www.kenall.com/patents. Content of specification sheets is subject to change; please consult www.kenall.com for current product details. ©2019 Kenall Mfg. Co.

A brand of  **legrand**


8. Assemble hub to housing as shown.

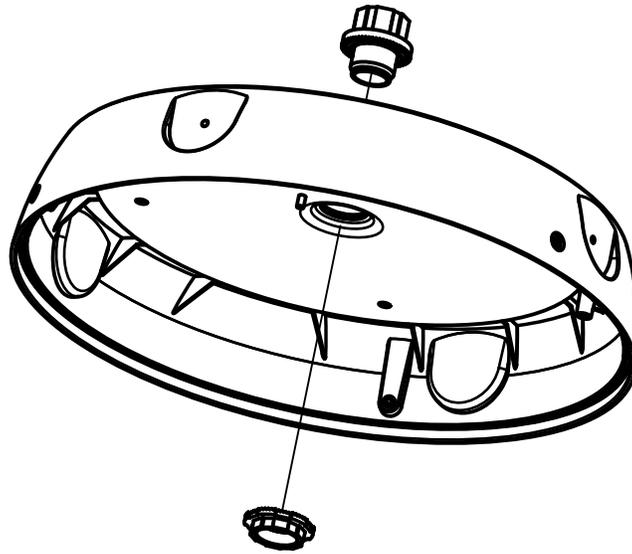


MOUNT FIXTURE WITH REGARDS TO OPTICAL ALIGNMENT KEY DIRECTION

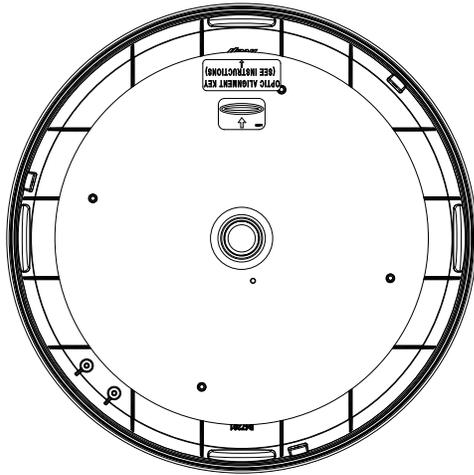



LIGHT DISTRIBUTION PATTERN TYPES

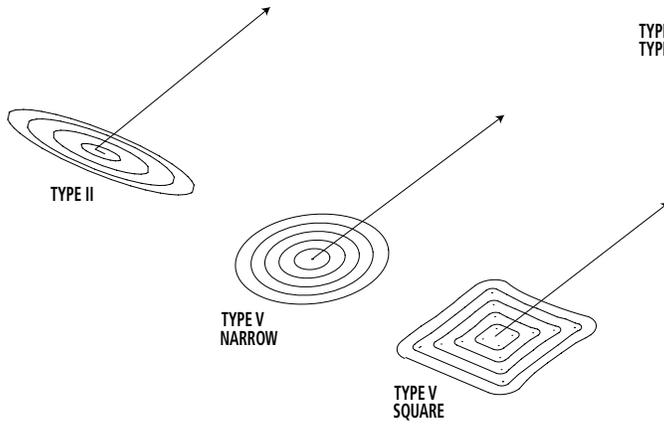

TYPE II

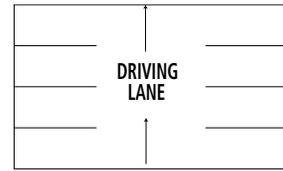

TYPE V, NARROW
TYPE V, SQUARE

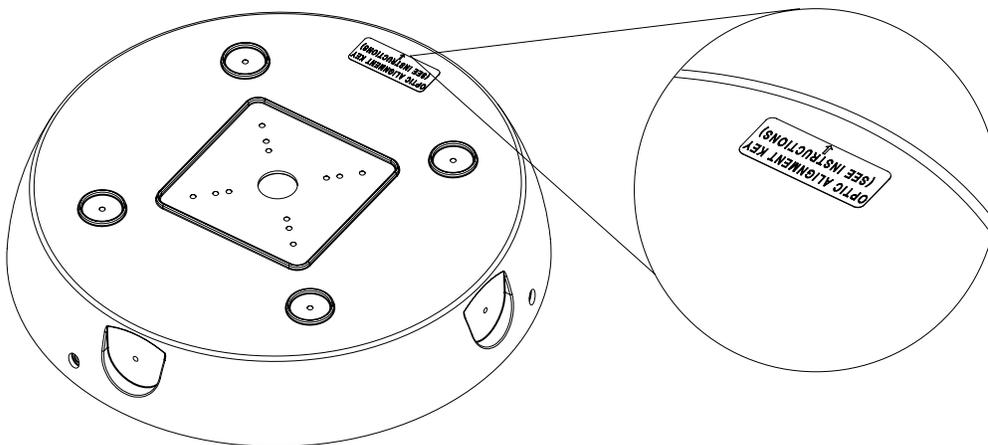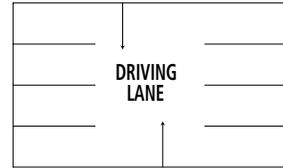

CUSTOMER SERVICE

For technical assistance, call 1-800-4KENALL (1-800-453-6255).

WARRANTY

For warranty information visit www.kenall.com/Resources/Certified-Performance-Warranties

