TPD23 SERIES



IMPORTANT SAFEGUARDS


When using electrical equipment, basic safety precautions should always be followed, including the following:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. DISCONNECT POWER TO ALL CIRCUITS BEFORE WIRING FIXTURE. INSTALL IN ACCORDANCE WITH ALL NATIONAL, STATE, AND LOCAL CODES. DO NOT CONNECT TO AN UNGROUNDED SUPPLY. READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE. SUPPLEMENTAL INSTRUCTIONS MAY BE LOCATED ON THE FIXTURE, IN ADDITION TO THIS INSTRUCTION SHEET, REGARDING ORIENTATION, OR MOUNTING RESTRICTIONS.

SAVE THESE INSTRUCTIONS

TENON MOUNT ADAPTER (for 2 $\frac{3}{8}$ tenon – by others)

- 1: Remove (4) screws that fasten the door.
- 2: Slide 3/8 bolts through holes on the back of the light fixture and through the tenon adapter. Use washer and nut to secure as shown.
- **3:** Pull electrical wire through tenon adapter hole.
- **4:** Close the door and fasten screws back in place.
- **5:** Slide entire assembly over existing tenon (by others) and secure in place with (3) set screws.
- **6:** Make electrical connections.
- **7:** Push fit top cap into tenon adapter.

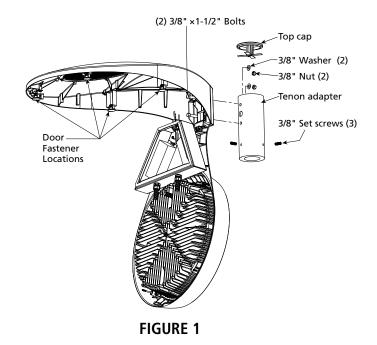



CUSTOMER SERVICE

For technical assistance, call 1-800-4KENALL (1-800-453-6255).

WARRANTY

For warranty information visit www.kenall.com/Resources/Certified-Performance-Warranties

