

EPLB SERIES – LOW BAY


IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. DISCONNECT POWER TO ALL CIRCUITS BEFORE WIRING FIXTURE. INSTALL IN ACCORDANCE WITH ALL NATIONAL, STATE, AND LOCAL CODES. DO NOT CONNECT TO AN UNGROUNDED SUPPLY. READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE. SUPPLEMENTAL INSTRUCTIONS MAY BE LOCATED ON THE FIXTURE, IN ADDITION TO THIS INSTRUCTION SHEET, REGARDING ORIENTATION, OR MOUNTING RESTRICTIONS.

SAVE THESE INSTRUCTIONS

REFRACTOR/ REFLECTOR REMOVAL

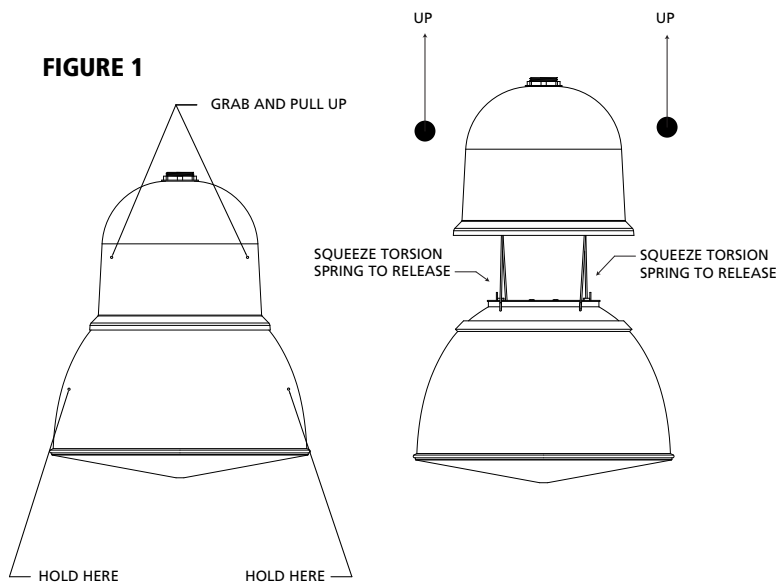

SAFETY RECOMMENDATION

A 1/16" diameter aircraft cable (not included) is recommended for attaching the fixture structural to the upper structural. See figure 2.

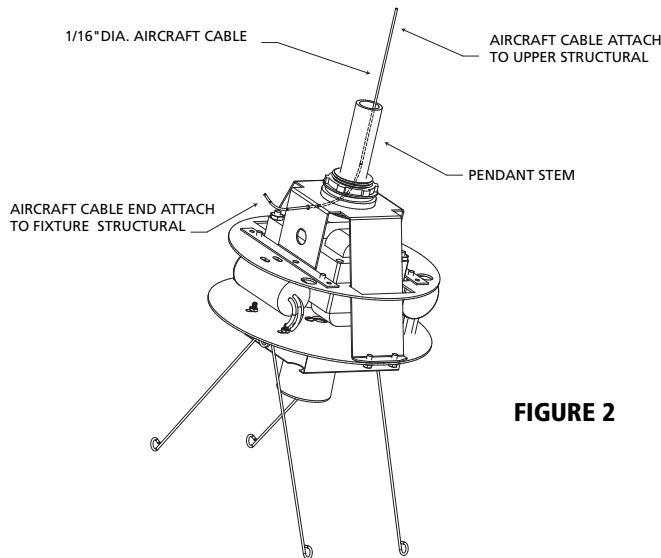


FIGURE 2



LOOP HANGER INSTALLATION – HL (FIGURE 3)

1. Remove refractor/ reflector per Figure 1.
2. Disconnect cord from luminaire.
3. Wire cord leads to power supply leads using connectors suitable for the gauge and number of wires being used. Black fixture lead connects to the supply conductor, white fixture lead connects to the neutral supply conductor, and the grounding wire must be connected to a suitable ground.
4. Hang luminaire by attaching to user supplied chain or cables.
5. Install lamp(s) if applicable
6. Re-install refractor/ reflector.
7. Connect power cord.
8. As a safety recommendation, an additional 1/16" diameter aircraft cable (not included) should be used to attach the loop hanger and supporting structure.

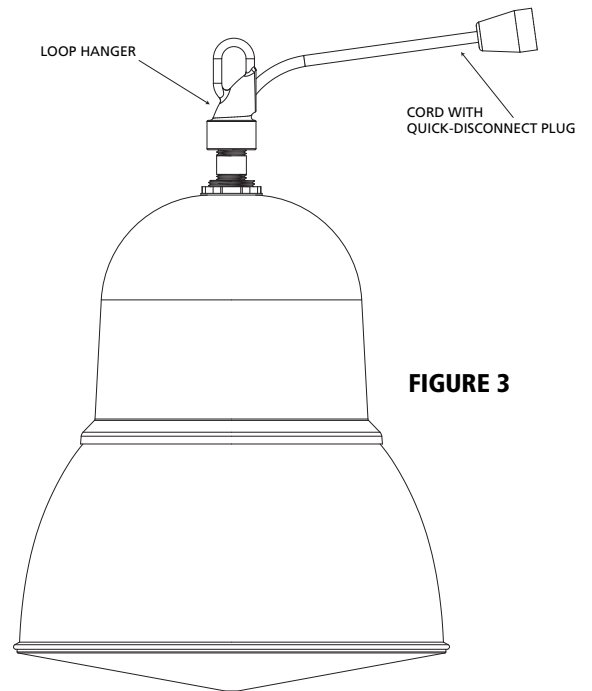


FIGURE 3

PENDANT MOUNT INSTALLATION – (EXCEPT 320M-400M) PM (FIGURE 4)

1. Remove refractor/ reflector per Figure 1.
2. Connect threaded hub for 1/2" diameter rigid pendant (12" size) or 3/4" diameter rigid pendant (16"/22" size). Pendant components by others.
3. Undo lock nut and slide housing/ cover up.
4. Install safety aircraft cable per Figure 2.
5. Pull wires into the luminaire.
6. Wire luminaire leads to power supply leads using connectors suitable for the gauge and number of wires being used. Black fixture lead connects to the supply conductor, white fixture lead connects to the neutral supply conductor, and the grounding wire must be connected to a suitable ground.
7. Slide housing/ cover down and tighten lock nut
8. Install lamp(s) if applicable
9. Re- install refractor/ reflector.

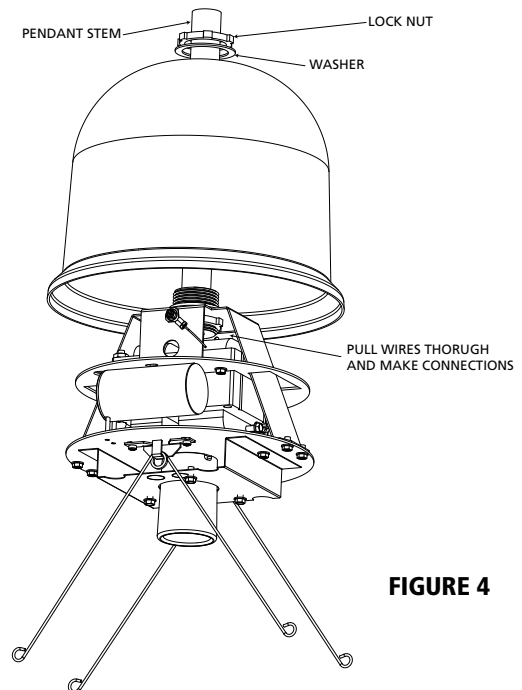


FIGURE 4



PENDANT MOUNT INSTALLATION – (320M-400M ONLY) PM (FIGURE 5)

1. Remove refractor/ reflector per Figure 1.
2. Feed wires through the 3/4" diameter rigid pendant stem (by others).
3. Connect threaded hub to the 3/4" diameter rigid pendant stem (by others) and attaching the other end to upper structural.
4. Undo lock nut and slide housing/ cover up.
5. Install safety aircraft cable per Figure 2.
6. Slide housing/ cover down and tighten lock nut.
7. At the junction box (outside the luminaire), Wire leads to power supply leads using connectors suitable for the gauge and number of wires being used. Black fixture lead connects to the supply conductor, white fixture lead connects to the neutral supply conductor, and the grounding wire must be connected to a suitable ground.
8. Install lamp(s) if applicable
9. Re-install refractor/ reflector.

* Wrap plumbers tape around stem thread before, screwing into fixture hub

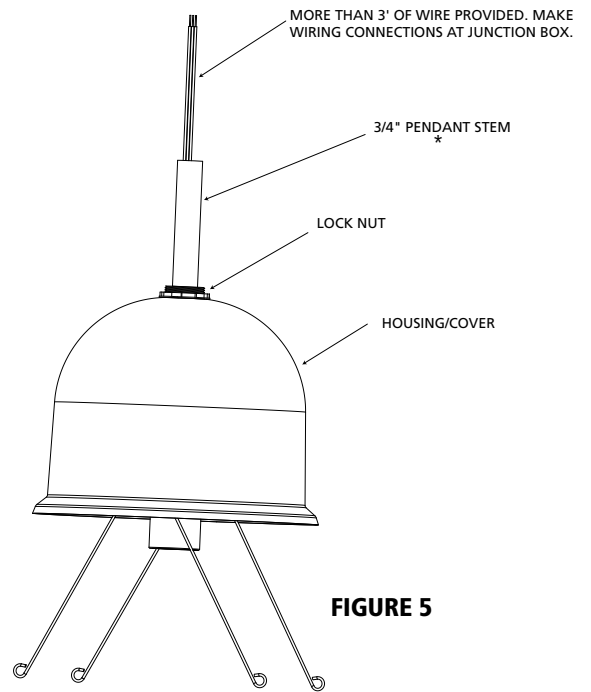


FIGURE 5

CUSTOMER SERVICE

For technical assistance, call 1-800-4KENALL (1-800-453-6255).

WARRANTY

All standard fixtures manufactured by Kenall are warranted to be free of defects in workmanship and materials for a period of one year from the date of invoice.

LED lamps and driver are warranted for three years for defects resulting in a fixture lumen depreciation of 30% or greater. Lumen depreciation is compared to the published lumen output of the product on the date of manufacture per IESNA LM-79 reporting procedures. Normal accumulation of particulates on the optical surfaces shall not be factored into the lumen depreciation. A toll-free hot-line number, 1-800-331-1416 is provided for immediate resolution of any field problems encountered in connection with the use of Kenall’s lighting products.

Kenall reserves the right to issue credit, repair, or replace the defective merchandise, at its option, upon notification and confirmation by its local representative of the defect. Kenall also reserves the right to examine the defective product if the defect is questionable and to deny the warranty herein for any product altered, improperly installed, or installed in applications for which it is not intended.

Kenall assumes no responsibility for labor or freight costs incurred in connection with the installation, removal, or replacement of products determined to be defective or any other consequential or incidental damages arising from the use of the product. Kenall’s entire liability on any claim of loss or damage resulting from a defective product is limited to the replacement price of the product.

The foregoing warranty is exclusive of all other warranties and no other warranties of any kind are expressed or implied.



www.kenall.com

P: 800-4-Kenall

F: 262-891-9701

10200 55th Street Kenosha, Wisconsin 53144

When you see this image, you will know the Kenall product shown or described is designed and manufactured in the USA with components purchased from US suppliers, and meets the Buy American requirements under the ARRA. Kenall has not determined the origin of its domestically purchased components or the subcomponents thereof. May be covered by patents found at www.kenall.com/patents. Content of specification sheets is subject to change; please consult www.kenall.com for current product details. © 2015 Kenall Mfg. Co. All rights reserved.